

# E-Z-GO TXT WINCH MOUNT BUMPER

## Installation Instructions

### Part# 7457



#### Hardware Kit

3/8 x1 Bolts-4

3/8 Washers-4

3/8 Locknuts-4




*Always wear appropriate eye protection!*



#### Installation Instructions:

1. Remove the 4 stock bolts holding the plastic front shock shield cover from the car. Remove the shock shield cover.
2. Using an angle drill and a 3/8" drill bit enlarge the 4 stock shock shield mounting holes as shown in FIGURE 1. You might want to start with a 5/16" drill bit first and then go to the 3/8" drill bit.

**Figure 1**

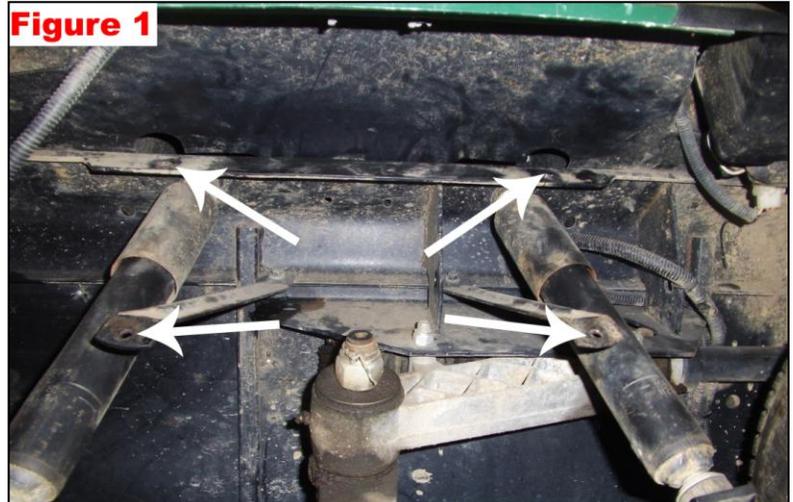

**Enlarge the four stock shock shield cover mounting holes to 3/8"**


3. Using the supplied 3/8 x 1 bolts, washers & locknuts install the new winch mount bumper to the enlarged stock shield cover mounting holes.

**NOTE: There are 2 sets of top mounting holes on the winch mount bumper.**

**If your car is a 1994.5-2001.5 model you will use the outer top holes. If your car is a 2001.5 & newer model you will use the inner top holes as shown in FIGURE 2.**

4. This bumper has 2 pre-drilled holes which match up with most 2000lb winches. If your winch does not line up with the 2 pre-drilled holes use your winch as a guide and mark and drill through the mounting plate new holes for mounting your winch.
5. Securely tighten all bolts.
6. The winch mount has a light mount tab on the bottom of the winch mount which will allow you to install off-road lights.

**Figure 2**

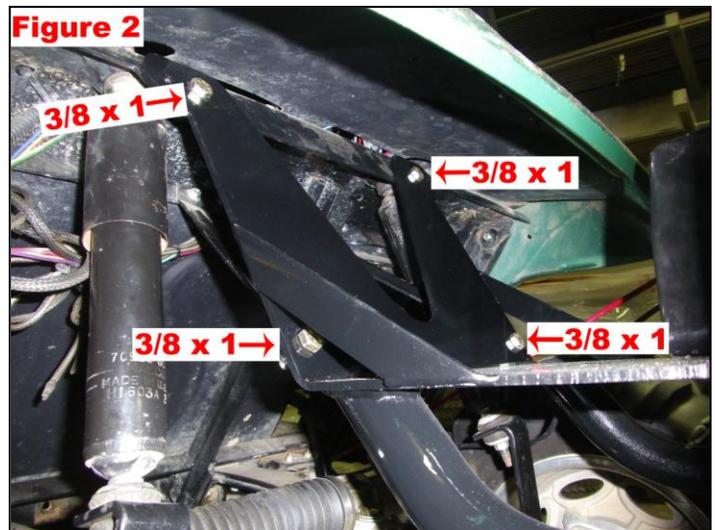

866-405-2537

[www.jakesliftkits.com](http://www.jakesliftkits.com)