


RKP YA5 3001
and RKP YA5 SS
Rocker Panels




Wear the
appropriate
eye protection!

Set the new panel up
against the existing
rubber panel. Center the
panel from left to right.

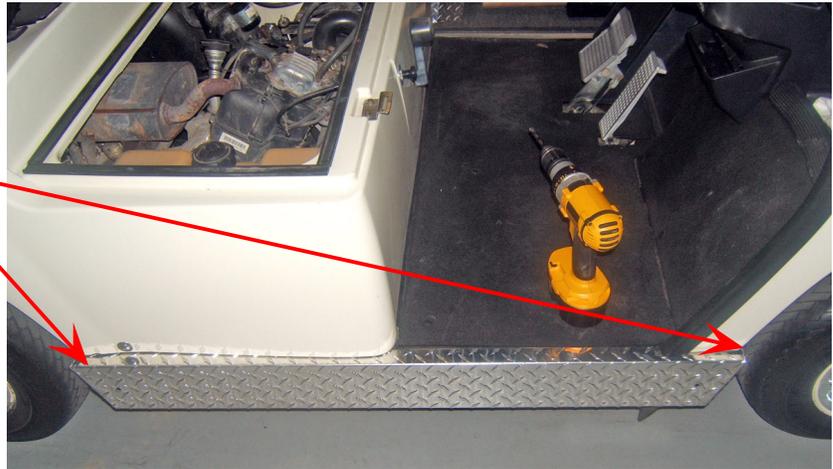

Hold the panel flush and with
a 9/32" drill bit, drill the
mounting holes on both ends.
Install the new hardware and
tighten securely.

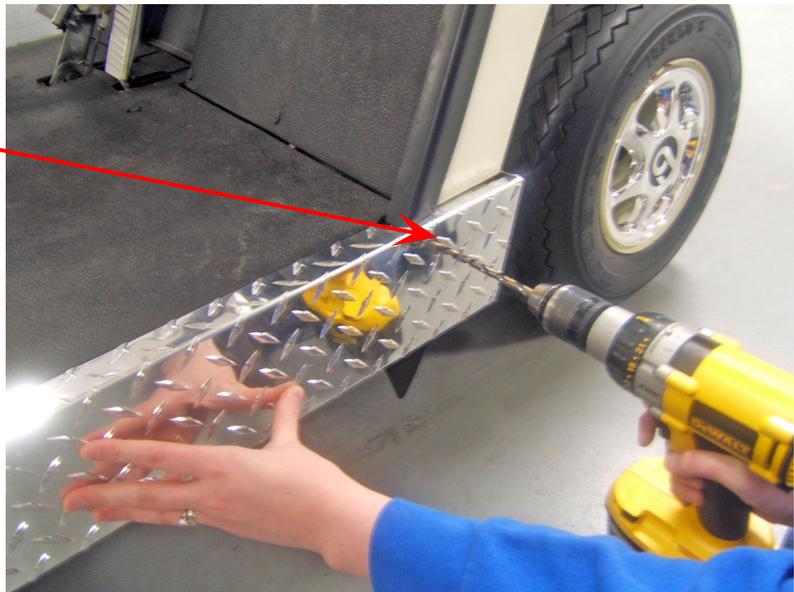

Note: the new panels
are pre-drilled for
ease of alignment
and panel drill points.

