

E-Z-GO Med./TXT Sport Shifter Installation Instructions Part# 7110





Parts List Shifter-1



*Always wear appropriate
eye protection!*



1. Place the cart in neutral and remove the stock shifter from the cart as shown in Figure 1. Save the stock screw for installing Jake's new sport shifter.
2. Unbolt the outside and top cover from the shifter box.
3. Unbolt the stock shifter linkage from back side of the cowl as shown in Figures 3 & 4.
4. Center the rear section of the shifter to the stock shifter shaft hole as shown in Figures 2 & 5.
5. Using a 1/4 drill bit, drill the four mounting holes into the body as shown in Figure 5. **NOTE: Make sure the shifter is level before drilling.**
6. Using the supplied bolts mount the shifter to the cart as shown in Figure 6.
7. Reinstall the stock forward/reverse switch to the cart. **NOTE: You may need to replace the stock top pop rivet from the center of the rear cowl when reinstalling the stock forward/reverse switch.**
8. Using the stock shifter screw attach Jake's shifting lever to the stock shifter shaft as shown in Figure 7.
9. Re-assemble the side and top shifter housing. **NOTE: Make sure your cart is still in neutral. When installing the top plate the shifter should be in the neutral location. If it is not you will need to adjust the heim ends inside the shifter to put the shifter shaft in the proper location.**

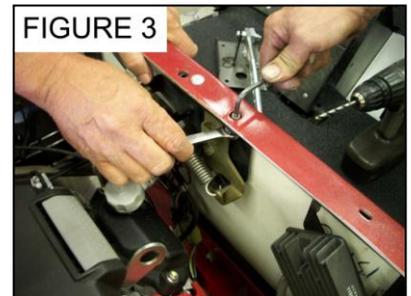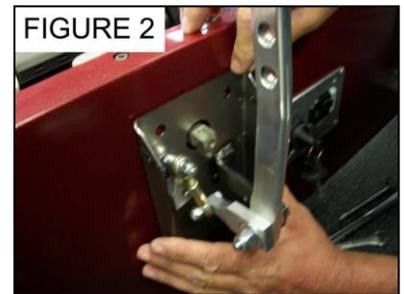

866-405-2537
www.jakesliftkits.com